



NCEOSCFANWH/BK

Quick Start Guide

RV 12 Volt Oscillating Fan



***Please read this Quick Start Guide prior to installation**



90° Fold



Removable Front
Grille



120° Swing



4 Speeds



LED Light



Remote Control

Contents

- 1. Precautions/Cleaning**
- 2. Basic Operation**
- 3. Basic Operating Instructions**
- 4. Remote Control**
- 5. Installation Instructions**
- 6. Troubleshooting**
- 7. Specifications**
- 8. Notes**
- 9. Warranty**
- 10. Warranty**

Precautions/Cleaning

Precautions

Please take a few moments to read through this Quick Start Guide Carefully. It will give you a better understanding of how to install and operate this unit correctly.

It is highly recommended that this unit be fitted by a certified professional installer to avoid damage to the unit and avoid warranty issues.


This Quick Guide has been developed to navigate the user through all the key functions. Should you have any other questions or concerns that are not covered in this manual, please feel free to contact NCE on (03) 9308 7444

Cleaning

- Before Cleaning, the product must be turned off
- It must be cleaned after the fan has completely stopped or rotating to avoid injury
- Do not immerse the power cord or the unit in water or wash it under running water
- Do not use detergents, wire brushes, alcohol, vinager or other volatile corrosive liquids to clean the fan
- Clean the surface of the fan with a slightly damp cloth


Removing the Fan Grille for cleaning

1. Fold open the fan
2. Remove the phillips screw behind the Fan Grille (Fig1)
3. Hold the rear Fan Grille with one hand and with the other hand, hold the Front Fan Grille and twist it clockwise (Right)
4. Remove the Grille. Wash and Dry before refitting
5. To refit, align the Lock symbol on the Grille (Fig2) with the Marker on the Fan Surround and turn anticlockwise to lock in
6. Screw the phillips screw back on

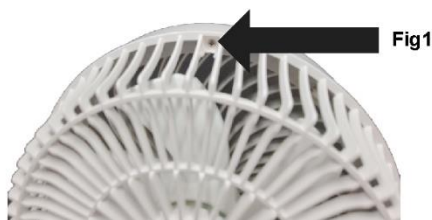

NCE is constantly reviewing and upgrading products and features which are subject to change without notice

Basic Operation

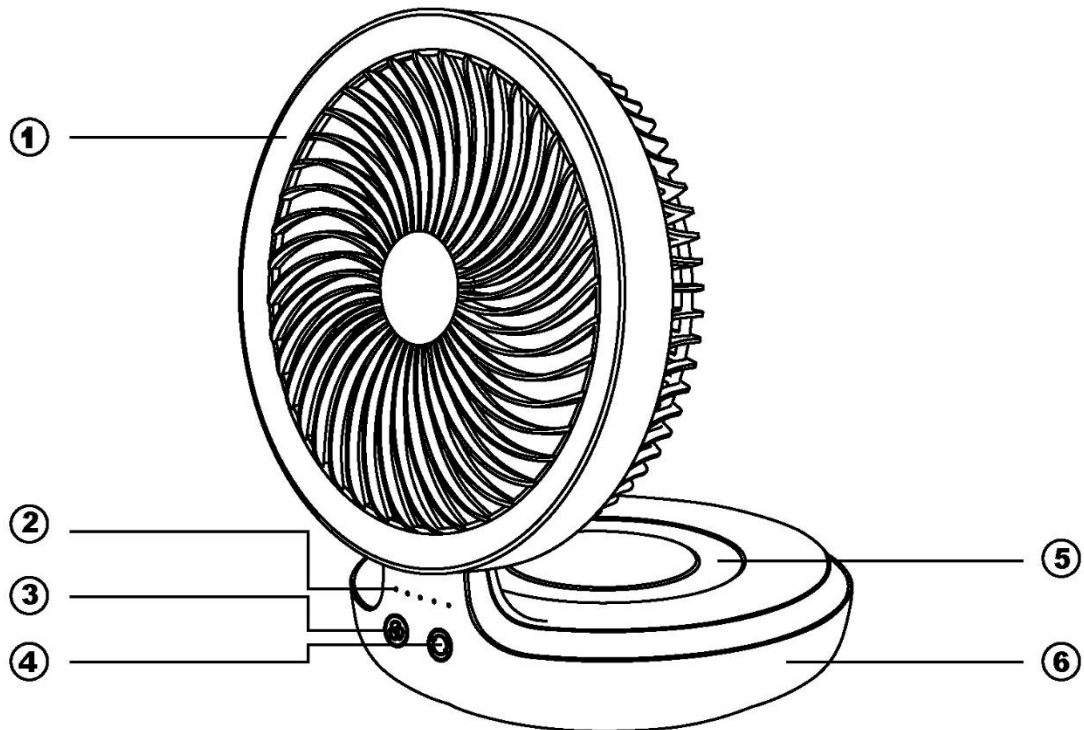

① Removable
Front Grille

② Power/Fan Speed
Indicator

③ Fan Speed
(Soft Touch)

④ Oscillating/Light
On/Off (Soft Touch)

⑤ LED Light

⑥ Fan Base

Basic Operating Instructions

Operating Instructions

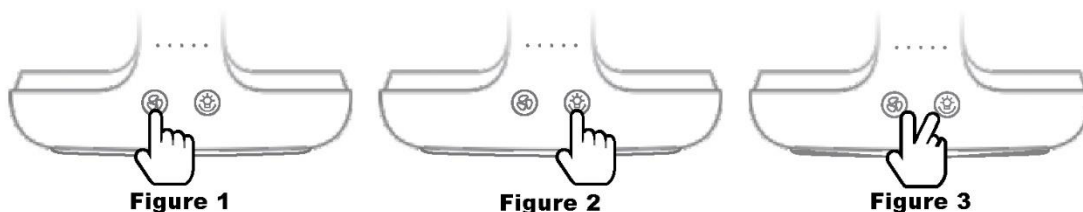


Figure 1 (Power/Fan Speed)

Press the Fan button to select Fan Speed 1 → 2 → 3 → 4 → Off, it's corresponding light will be indicated

NOTE: Please open Fan to the first position from closed to get sufficient Air Flow

Figure 2 (Oscillating/Light)


Press the Oscillating button to turn On the Oscillating, press again to turn Off. Press and hold to turn the Light On, Press and hold again to turn the Light Off.

Figure 3 (Child Lock)

For safety of children not accidentally turning on the Fan, you can turn On the Child Lock feature by pressing and holding the two buttons together for 5 seconds. Press and hold both buttons again for 5 seconds to turn Off Child Lock.

Remote Control

Remote Control

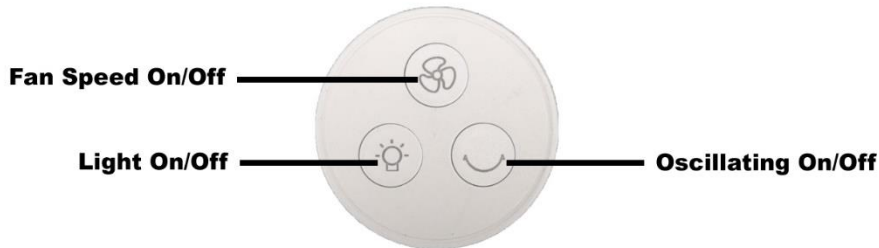

- Press and hold the Fan Button to turn the Fan On and Off
- Press the Fan Button to select the fan speed 1 → 2 → 3 → 4 →
- Press the Light Button to turn On the light, press again to turn Off
- Press the Oscillating button to turn On the Oscillating, press again to turn Off

Replacing the Battery


1. Pry open the Remote Control from the side using a flat screwdriver (Fig1)
2. Using a pointy object (Fig2), push out the battery and replace with the same type battery (CR2016)
3. Align the two notches on both sides of the Remote Control and press together (Fig3)



(Fig1)




(Fig2)

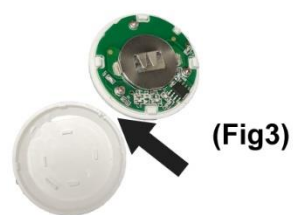

(Fig3)

Remote Control Pairing

Press and hold both buttons on the Fan and the Fan Button on the Remote Control all at the same time for 5 seconds.

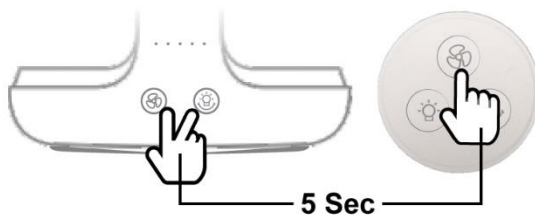

WARNING:

This remote control contains a coin/button cell battery inside. Keep batteries out of reach of children.

Swallowing may lead to serious injury or death in as little as 2 hours due to internal burns.

Seek medical treatment immediately if swallowed

Installation Instructions

Installation Instructions

1. Feed the 12V power supply cable through the 10mm hole on the Wall Mounting Plate (Fig 1)
2. Screw the Wall Mounting Plate with the supplied screws on the wall with the Arrow facing UP (Fig 1)
3. Connect the Fan Cable to the 12V power supply making sure the correct polarity. Red to +12V and Black to - GND (Fig 2)
4. Align the Notches of the bottom of the Wall Mount Plate and the Fan Base (Fig 3)
5. Turn the Fan clockwise to lock in until you hear a click (Fig 4)

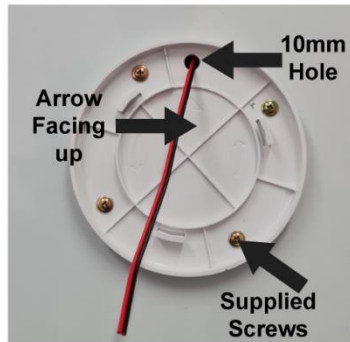
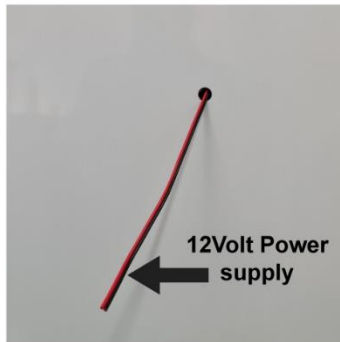


Fig 1

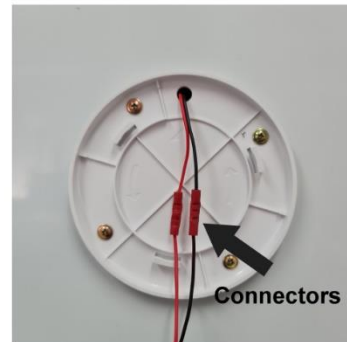


Fig 2

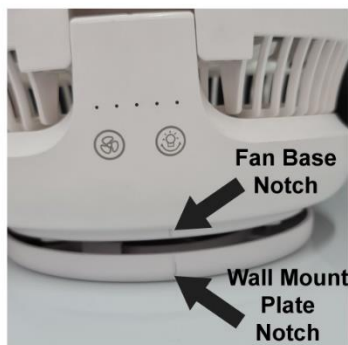


Fig 3

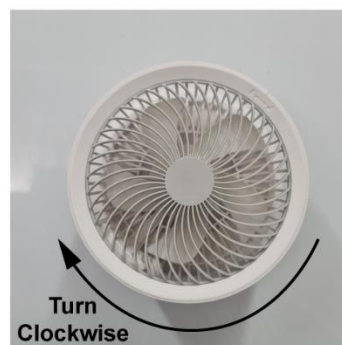


Fig 4

Troubleshooting

Problem	Cause	Solution
There is no power	Incorrect wiring	Check wiring
There is no power	ACC power switch is turned off	Turn on ACC power switch
Power light is on but fan not turning on	The child lock has been turned on	Turn off the child lock by pressing and holding both buttons for 5 seconds
There is no air flow	The fan is in the closed position	Open fan to at least first position from closed for sufficient air flow

Specifications

General

Operating Power	DC +12 Volts
Current Draw	500mA
Fan Speeds	4
Connection	Direct Hard Wire
Weight (kg)	
Height (mm)	260
Width (mm)	190
Length (mm)	190
Warranty	12 Months